## CA100020420 SWITCH BRAKE LIGHT OEM QUALITY FOR ISUZU DMAX12-19 4JJ1 4JK1

 
HAO SHENG

### **Basic Information**

- Place of Origin:
- D IN
- Brand Name:
- Model Number: CA100020420 8-98140486-0

CHINA

- Minimum Order Quantity: 1
- Packaging Details:
- Delivery Time:
- Payment Terms:



JIANGXI ISUZU /HOSEM

T/T, L/C, Western Union, Alipay

Email:info@g

HAOSH

#

ISUZU

### Product Specification

- OEM NO.:
- Part Name:
- Apply:
- Car Model:
- Engine Type:
- Highlight:

- CA100020420 8-98140486-0
- SWITCH BRAKE LIGHT
- Automatic Transmission
- FOR ISUZU DMAX12-19
- 4JJ1 4JK1
  - ISUZU DMAX SWITCH BRAKE LIGHT, OEM QUALITY SWITCH BRAKE LIGHT, 4JJ1 4JK1 SWITCH BRAKE LIGHT



HAOSH Email:info@gzhaosh.com

Our Product Introduction

#### **Product Description**

#### SWITCH BRAKE LIGHT FOR ISUZU DMAX12-19 4JJ1 4JK1 CA100020420 8-98140486-0

Product Name	SWITCH BRAKE LIGHT
Car Fitment	Isuzu DMAX12-19 4JJ1 4JK1
Part Number	CA100020420 8-98140486-0
Price	Negotiable, the more the quantity, the lower the price
Packaging	Hosem Brand/Neutral/Customized for customer needs
Shipment	By Sea/ Air/ Express
Deliver Date	5-10days After receiving the deposit
Quality Guarantee	3-6months

**Company Advantages** 

1. We have profession knowledge about Isuzu spare parts ,more than 15 years experience in chassis parts and engine parts etc.

2. We can offer genuine parts, oem, genuine made in china parts to you.

3.All parts can check with part number, all parts can order follow part number.


- 4. Quick delivery time, will delivery the goods within 15 days.
- 5. Safe packing to protect the goods, such as wooden box, Iron sheet for our parts.
- 6.We can make custom labels and packaging for customers.

7. Small quantity can accept.







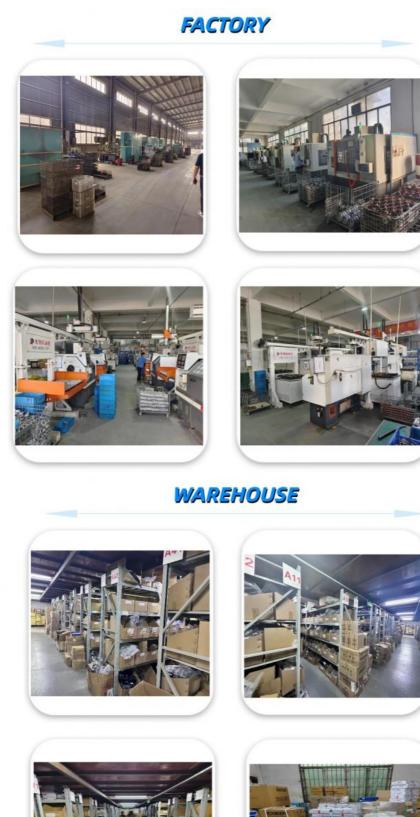



# SHOWROOM









## HOT SELL PRODUCT



DALL JOINT



ALTERNATOR RECULATION













POWER STEERING PUMP







Routine Maintenance of Switch Brake Lights:

1.Regularly check the working condition of the brake light switch, which can be judged by observing whether the brake light lights up normally when the brake pedal is pressed and goes out promptly when the pedal is released. 2.Keep the brake light switch clean to prevent dirt and other impurities from getting inside the switch and affecting its performance.

3. Once the brake light switch is found to be malfunctioning, such as the brake light is always on, does not light up or flickers and other abnormalities, it should be repaired or replaced in time.

